

# BASIC TENT PARTS:



## STAKES


Single Head (bottom) & Double Head (top). Used to anchor tent to the ground



## CENTER POLES

Used to support tent. Color-coded and sorted on racks in outside dock area.

*Frame tents do not use center poles.*

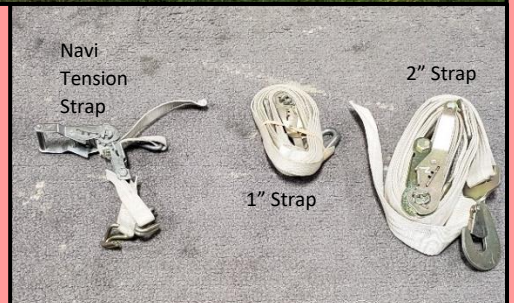

## TENT STRAPS

1" Single, 2" Double Yolk, Navi Tension Strap. Used to anchor tent to ground and tension tent top on frame



## SHIMS

Used to help prevent center and side poles from sinking into the ground.

## SIDE POLES

Used to support tent.

Metal 7', 8', and Wood 7'

