



1818 Lakeview Drive, Fort Wayne, IN 46808
Office 260-432-8636
www.muttonrentals.com
Emergency/After hours Contact: 260-557-4381

Sno-Cone Machine Instructions

Ice Requirements

- The shaver will accept ice cubes or block ice.
- Break blocks of ice into 2 to 3-inch pieces to fit into the hopper. The ice will not enter the shaving chute if the pieces are too large.
- Harder ice will result in a finer snow; soft ice will result in a coarser snow.

To Operate the Shaver

1. Install the drain tube to guide melting snow in the direction of your choosing.
2. Raise Hopper Lid (pusher cap) and load hopper with ice, a scoop has been provided with the machine.
DO NOT** put any object or hands into the hopper, **ICE ONLY.
3. Close pusher cap, and apply gentle downward pressure.
4. Turn on the power switch.
5. Press and hold in the red momentary switch to shave the ice. Release the button once all of the ice has been shaved.
6. Adjust downward pressure to allow ice to adjust if needed.
7. Do not lift the pusher cap until the motor is off and the shaver head has stopped. Turn off power switch.
8. Lift pusher cap and repeat steps 2-6 to shave more ice.
9. A long handled, round scoop is provided for serving sno-cones. Dress the ice with your syrup flavor of choice and ***ENJOY!***

Caution!

- Do not apply pressure on handle until motor is up to speed.
- Too much pressure on the pusher handle will make the ice come out too coarse; too little pressure makes the ice mushy.
- In normal operations the motor gets warm. A surface temp of 150 is normal.
- Never allow any foreign or metallic objects around the shaver area. Ice picks, scoops, and debris that may be in the ice often damage blades
- Always turn off the machine and unplug it prior to cleaning. Never wash machine using abrasive cleaners, chemicals, steel wool, brushes, or leave overnight unwashed. Always wash with a mild detergent (dish soap) and dry with a soft cloth after use.